TP6837

USB RF 2.4G Presenter Device

User Manual

tenx reserves the right to change or discontinue the manual and online documentation to this product herein to improve reliability, function or design without further notice. tenx does not assume any liability arising out of the application or use of any product or circuit described herein; neither does it convey any license under its patent rights nor the rights of others. tenx products are not designed, intended, or authorized for use in life support appliances, devices, or systems. If Buyer purchases or uses tenx products for any such unintended or unauthorized application, Buyer shall indemnify and hold tenx and its officers, employees, subsidiaries, affiliates and distributors harmless against all claims, cost, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use even if such claim alleges that tenx was negligent regarding the design or manufacture of the part.

AMENDMENT HISTORY

Version	Date	Description
V1.0	Feb, 2011	New release

CONTENTS

AMENDMENT HISTORY 2
1. Using the Presenter Device for the First time 4
1.1. Dry Battery Usage 4
1.2. Recognize the Device 4
2. How to Use Presenter Device 5
2.1. Power ON and Power OFF 5
2.2. Wireless Connection 5
2.3. Presenter Device Motion Control 6
3. Presenter Device Wheel Button 7
4. Presenter Device Function Key 7
5. Change Presenter Device Battery 7

1. Using the Presenter Device for the First time

1.1. Dry Battery Usage

The presenter device uses 2 dry batteries.

1.2. Recognize the Device

1. Plug the Dongle in the PC USB port
2. The presenter device uses finger-tip mode to power ON/OFF, when finger tips to power ON, presenter device LED blinking frequency will slow down
3. Press and hold the dongle connecting button until the LED turns on.
4. Release the connection button.
5. When the wireless LAN is successfully connected between the dongle and Presenter Device, the Presenter device LED light will be solid.

Note: If the user wants to use the Air mouse to connect another Air mouse dongle, user must repeat the "Recognize the Device" process to connect another dongle.

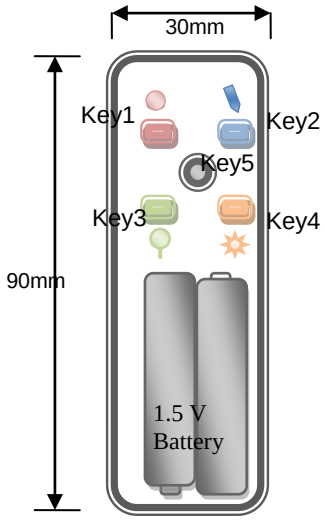

2. How to Use Presenter Device

2.1. Power ON and Power OFF

Use finger-tip mode to power ON/OFF, when finger tips to power ON, presenter device LED blinking frequency will slow down, when finger tips to power OFF, LED will go to OFF status.

LED blinking status:

Light	Status	Description
LED	Blinking with 1 sec interval	Low battery
	Blinking with 0.64 sec interval	RF connect/reconnect
	Always ON	normal connection, fully charged

2.2. Wireless Connection

1. Plug the Dongle in the PC USB port.
2. The presenter device uses finger-tip mode as power ON/OFF, when finger tips to power ON, presenter device will start searching wireless signal.
3. When the wireless LAN is successfully connected between dongle and the Presenter device, the Presenter device LED light will be solid.

Note:

If the connection fails:

1. Please plug in the dongle before turning on the Presenter device.
2. The distance between dongle and Presenter device must be within 10 meters.
3. If the connection stills fails, please repeat the step “1.2 Recognize the Device”.

2.3. Presenter Device Motion Control

The user can point the Presenter device in any direction to control the cursor's movement (the Left and Right or Up and Down).

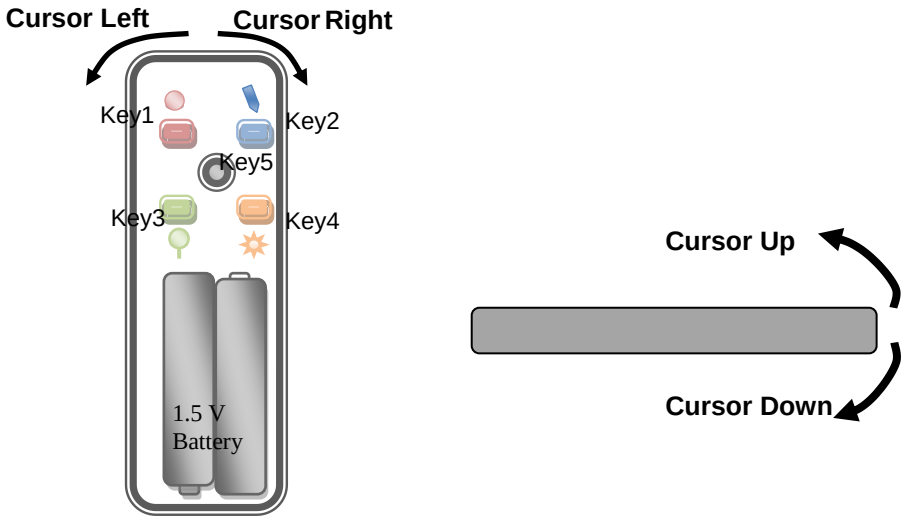

Top View Side View

3. Presenter Device Wheel Button

1. When the user wants to use the Presenter device to control the scroll bar, user can use Page up or Page down function in Presentation mode, please press and hold Key 5 (L-key) to enable this function, pull up to go to the previous page, and pull down to go to the next page.
2. Release L-key to disable the wheel button function.

4. Presenter Device Function Key

User presses:

Key 1: Red point (press and hold, light point), if Key 1 is released and Key 5 is pressed, the red point will be removed.

Key 2: Pen (press and hold, draw line), if Key 2 is released and Key 5 is pressed, the line drawn will be erased.

Key 3: Zoom in (press and hold, select an area), release Key 3 and press Key 5 to exit from this function.

Key 4: Marker pen (press and hold, select an area), release Key 4 and press Key 5 to exit from this function.

Key 5: OK (press and hold, pull up, go to previous page, pull down, go to next page).

5. Change Presenter Device Battery

Please change the battery of Presenter device when the following conditions happen:

- Using the Presenter device for the first time.
- LED blinks during the working mode.
- The blinks cannot be powered on.

The user must repeat the step 1 as shown in the "1. Using the Presenter device for the First time"